
 
 
 
 








Originalfernbedienung Ersatzfernbedienung

	Standby		Power
	Mute		Mute
	1		1
	2		2
	3		3
	4		4
	5		5
	6		6
	7		7
	8		8
	9		9
	0		0
	Display		Info
	Recall		Back
	Setup		Menu
	EPG		Guide
	Source		AV

Originalfernbedienung Ersatzfernbedienung

	Audio		Dual
	Subtitle		Subt
	CH.List		List
	FAV		Pre Ch
	Up		Up
	Down		Down
	Right		Right
	Left		Left
	Ok		Ok
	Vol+		Vol +
	Vol-		Vol -
	Exit/Cancel		Exit
	S.Mode		Shift + Dual
	P.Mode		Format
	CH+/Page+		Ch +
	CH-/Page-		Ch -
	Red/Goto		Red

 


 
 

 
 
 
 





Originalfernbedienung Ersatzfernbedienung

 A-B	Green/A-B	 B	Green
 REPEAT	Yellow/Repeat	 C	Yellow
 ANGLE	Blue/Angle	 D	Blue
 Record	Record	 REC MODE	Rec
 Rec.List	Rec. List	 HOME SMART	Smart
 TV/Radio	TV/Radio	 SEARCH TV/R	TV/R
 Scaler	Scaler	 ECO 3D	3D
 Play	Play	 PLAY MODE	Play
 Pause/Reveal	Pause/Reveal	 II	Pause
 Stop/Index	Stop/Index	 ■	Stop
 I<<	I<<	 ⏮	I<<
 <</Mix	<</Mix	 ⏪	<<
 >>I	>>I	 ⏭	>>I
 >>	>>	 ⏩	>>
 Text	Text	 REPEAT TEXT	Text
 S. Page /	S. Page /	 E-MANUAL D.MENU	D. Menu
 Hold/Title	Hold/Title	 APP MEDIA	Media

Originalfernbedienung Ersatzfernbedienung

 Zoom+ Size	Zoom+/Size	 SHIFT +  +	Shift + Ch +
 Zoom-	Zoom-	 SHIFT +  -	Shift + Ch -
 Eject	Eject	 ZOOM  ▲	Eject
 Sleep	Sleep	 PROG SLEEP	Sleep

