


**Originalfernbedienung Ersatzfernbedienung**

	Standby		Power
	Mute		Mute
	AV		AV
	Tv/Rad		TV/R
	1		1
	2		2
	3		3
	4		4
	5		5
	6		6
	7		7
	8		8
	9		9
	0		0
	Menu		Menu
	TXT		Text
	Back		Back

**Originalfernbedienung Ersatzfernbedienung**

	Exit		Exit
	Up		Up
	Down		Down
	Right		Right
	Left		Left
	OK		Ok
	Red		Red
	Green		Green
	Yellow		Yellow
	Blue		Blue
	Vol+		Vol +
	Vol-		Vol -
	Audio		Dual
	Info		Info
	Sub		Subt
	List		List
	CH+		Ch +





Originalfernbedienung Ersatzfernbedienung

	CH-		Ch -
	APP		Media
	EPG		Guide
	I<<<		I<<<
	<<<		<<<
	>>>		>>>
	>>I		>>I
	Rec		Rec
	Play		Play
	Pause		Pause
	Stop		Stop
	File		Smart

Originalfernbedienung Ersatzfernbedienung


