






 
 




 






 



 



 















 

 

 


 
 
 
 



 
 


 








Originalfernbedienung Ersatzfernbedienung

	Power		Power
	Sleep		Sleep
	CBL/SAT		1
	DVD		2
	Blu-ray		3
	Game		4
	AUX1		5
	Media Player		6
	TV Audio		7
	AUX2		8
	Tuner		9
	iPod/USB		Guide
	CD		0
	Bluetooth		Pre Ch
	Online Music		Smart
	Internet Radio		Media
	CH/Page+		Ch +

Originalfernbedienung Ersatzfernbedienung

	CH/Page-		Ch -
	Eco		3D
	Vol+		Vol +
	Vol-		Vol -
	Mute		Mute
	Info		Info
	Option		Options
	Back		Back
	Setup		Menu
	Up		Up
	Down		Down
	Right		Right
	Left		Left
	Enter		Ok
	I<</Tune-		I<<
	Play		Play
	Pause		Pause





Originalfernbedienung Ersatzfernbedienung











 

 

 
 

 

 
 
 

 



 




TUNE + 	>> /Tune+		>>
	Smart Select 1	 + 	Shift + 1
	Smart Select 2	 + 	Shift + 2
	Smart Select 3	 + 	Shift + 3
	Smart Select 4	 + 	Shift + 4
	Green/Movie		Green
	Red/Music		Red
	Blue/Game		Blue
	Yellow/Pure		Yellow

Originalfernbedienung Ersatzfernbedienung





 




 








 




 



 










Originalfernbedienung Ersatzfernbedienung

	Power		Power
	Sleep		Sleep
	CBL/SAT		1
	DVD		2
	Blu-ray		3
	Game		4
	AUX1		5
	Media Player		6
	TV Audio		7
	AUX2		8
	Tuner		9
	iPod/USB		Guide
	CD		0
	Bluetooth		Pre Ch
	Online Music		Smart
	Internet Radio		Media
	CH/Page+		Ch +

Originalfernbedienung Ersatzfernbedienung

	CH/Page-		Ch -
	Vol+		Vol +
	Vol-		Vol -
	Mute		Mute
	Back		Back
	Up		Up
	Down		Down
	Right		Right
	Left		Left
	Enter		Ok
	I<</Tune-		I<<
	>>I/Tune+		>>I
	Play		Play
	Pause		Pause
	Smart Select 1		Shift + 1
	Smart Select 2		Shift + 2
	Smart Select 3		Shift + 3



