





Originalfernbedienung Ersatzfernbedienung

	Power		Power
	Source		AV
	1		1
	2		2
	3		3
	4		4
	5		5
	6		6
	7		7
	8		8
	9		9
	0		0
	TXT/MIX/Text		Text
	PRE-CH		Pre Ch
	Vol+		Vol +
	Vol-		Vol -
	Mute		Mute

Originalfernbedienung Ersatzfernbedienung

	P+		Ch +
	P-		Ch -
	CH List		List
	Menu		Menu
	Smart Hub		Smart
	Guide		Guide
	Tools		Options
	Info		Info
	Back/Return		Back
	Exit		Exit
	Up		Up
	Down		Down
	Right		Right
	Left		Left
	Ok		Ok
	Red		Red
	Green		Green





Originalfernbedienung Ersatzfernbedienung

	Yellow		Yellow
	Blue		Blue
	Rec		Rec
	E-Manual		D. Menu
	D		Media
	Stop		Stop
	<</ <<		<<
	Play		Play
	Pause		Pause
	>>/>>		>>

Originalfernbedienung Ersatzfernbedienung

