 
 

 



 
 

 

 

 
 

 

 
 










 






Originalfernbedienung Ersatzfernbedienung

	Power		Power
	Open/Close		Eject
	Band		Green
	DVD		Yellow
	AUX		Red
	1		1
	2		2
	3		3
	4		4
	5		5
	6		6
	7		7
	8		8
	9		9
	0		0
	Sleep		Sleep
	XTS		List

Originalfernbedienung Ersatzfernbedienung

	XTS Pro		Guide
	[...]/Subtitle		Subt
	Return		Back
	Audio		Dual
	Sound		Shift + Dual
	Marker		Smart
	Search		Shift + TV/R
	Setup		Options
	Disp.		Info
	Menu		Menu
	Title		TV/R
	Up/Preset+		Up
	Down/Preset-		Down
	Right/Tun+		Right
	Left/Tun-		Left
	Enter		Ok
	Vol+		Vol +





Originalfernbedienung Ersatzfernbedienung

	Vol-		Vol -
	Mute		Mute
	<</Scan-		<<
	>>/Scan+		>>
	Play		Play
	</Slow-		Ch -
	I>/Slow+		Ch +
	Pause/Step		Pause
	I<</Skip-		I<<
	>>/Skip+		>>I
	Stop		Stop
	Clear		Exit
	Prog/Memo		Shift + Sleep
	Repeat		Text
	Repeat A-B		3D
	Zoom		Shift + Eject
	Dimmer		Media

Originalfernbedienung Ersatzfernbedienung

	RDS/Resolution		Format
	PTY		D. Menu
	D.Input		Pre Ch



