





 

 



 

 



 

 



 
 
 


 

 



 


 


 






 
 






 
 





 

 






Originalfernbedienung Ersatzfernbedienung

	Power		Power
	[≡i]/Info		Info
	1		1
	2		2
	3		3
	4		4
	5		5
	6		6
	7		7
	8		8
	9		9
	0		0
	[≡?]/Source		AV
	O)/II/Audio		Dual
	Menu		Menu
	[≡♦]/[+]		3D
	Recall		Back

Originalfernbedienung Ersatzfernbedienung

	Exit		Exit
	Up		Up
	Down		Down
	Right		Right
	Left		Left
	Enter		Ok
	CH+		Ch +
	CH-		Ch -
	Vol+		Vol +
	Vol-		Vol -
	Mute		Mute
	List		List
	Sleep		Sleep
	EPG		Guide
	♥		Pre Ch
	Red		Red
	Green		Green





Originalfernbedienung	Ersatzfernbedienung	Originalfernbedienung	Ersatzfernbedienung
	Yellow		Yellow
	Blue		Blue
	<<		<<
	>>		>>
	I<<		I<<
	>>I		>>I
	Play		Play
	Pause		Pause
	Stop		Stop
	Rec		Rec
	[≡]		Text
	[≡+]/Still		Format
	[≡o]/Subtitle		Subt
	Radio		TV/R
	[≡x]		Options
	DMP		Smart
	Index		Media

