

 








 
 
 

 

 



 

 

 

 








 





Originalfernbedienung Ersatzfernbedienung










 


 
 
 
 
 

 

 
 

 

 

 
 
	Power		Power
	ShowView		Smart
	Rec Check		3D
	Ext Link		Text
	Rec		Rec
	1		1
	2		2
	3		3
	4		4
	5		5
	6		6
	7		7
	8		8
	9		9
	0		0
	-/--		Guide
	AV/Input Select		AV

Originalfernbedienung Ersatzfernbedienung

	Tracking/V-Lock+		Ch +
	Tracking/V-Lock-		Ch -
	Vol+		Vol +
	Vol-		Vol -
	I<< Index		I<<
	Index >>I		>>I
	<<		<<
	>>		>>
	Stop		Stop
	Pause/Step		Pause
	Play		Play
	Prog Play		Options
	Menu		Menu
	Display		Info
	Exit		Exit
	Up		Up
	Down		Down





 




 
 
 

 

 



 

 

 

 

 






 



Originalfernbedienung		Ersatzfernbedienung		Originalfernbedienung		Ersatzfernbedienung	
	Right		Right				
	Left		Left				
	Enter		Ok				
	Prog/Check		Sleep				
	Timer	 + 	Shift + AV				
	Output		TV/R				
	AV Link		Media				
	Audio		Dual				
	Tv Aspect/Off		Format				
	Music w/Picture		List				
	A/Cancel Reset		Red				
	B/I-Timer		Green				
	C/SP/LP/EP		Yellow				
	D/VPS/PDC		Blue				











 
 





 
 
 
 
 
 

 
 
 











Originalfernbedienung Ersatzfernbedienung

	Power		Power
	Rec Check		3D
	Ext Link		Media
	1		1
	2		2
	3		3
	4		4
	5		5
	6		6
	7		7
	8		8
	9		9
	0		0
	>10		Guide
	AV/Input Select		AV
	Tracking/V-Lock/C		Ch +
	Tracking/V-Lock/C		Ch -

Originalfernbedienung Ersatzfernbedienung

	Vol+		Vol +
	Vol-		Vol -
	I<< Skip		I<<
	Skip >>I		>>I
	<< Slow/Search		<<
	Slow/Search >>		>>
	Stop		Stop
	Pause/Step		Pause
	Play		Play
	Top Menu/Direct Navigator		Menu
	Play List		List
	Display		Info
	Return		Back
	Up		Up
	Down		Down
	Right		Right
	Left		Left





Originalfernbedienung Ersatzfernbedienung

 







 

	Enter		Ok
	Timer	+	Shift + AV
	Quick Replay		D. Menu
	Output		TV/R
	Subtitle		Subt
	Audio		Dual
	Angle/Page		Smart
	Music w/Picture		Pre Ch
	Play Mode	+	Shift + Play
	Zoom		Eject
	Repeat		Text
	Position		Options
	A/Cancel Reset		Red
	B/Cinema		Green
	C/Group		Yellow
	D/Setup		Blue

Originalfernbedienung Ersatzfernbedienung





Originalfernbedienung Ersatzfernbedienung

	Power		Power
	1		1
	2		2
	3		3
	4		4
	5		5
	6		6
	7		7
	8		8
	9		9
	0		0
	AV/Input Select		AV
	CH+		Ch +
	CH-		Ch -
	Vol+		Vol +
	Vol-		Vol -

Originalfernbedienung Ersatzfernbedienung

	Tv Aspect		Format
	A		Red
	B		Green
	C		Yellow
	D		Blue

