


 
 
 
 

 

 

 

 

 

 
 
 
 
 









 


 

 
 
 
 











 





Originalfernbedienung Ersatzfernbedienung

	Power		Power
	Tv		TV/R
	1		1
	2		2
	3		3
	4		4
	5		5
	6		6
	7		7
	8		8
	9		9
	0		0
	Enter		Ok
	PRE-CH		Pre Ch
	CH LIST		List
	FAV CH		Shift + Pre Ch
	Tools		Options

Originalfernbedienung Ersatzfernbedienung

	Menu		Menu
	Return		Back
	Info		Info
	Exit		Exit
	Up		Up
	Down		Down
	Right		Right
	Left		Left
	Enter		Eject
	Red		Red
	Green		Green
	Yellow		Yellow
	Blue		Blue
	Vol+		Vol +
	Vol-		Vol -
	Mute		Mute
	Source		AV



