
 
 



 

 









 

 

 


 


 







**Originalfernbedienung    Ersatzfernbedienung**

	Power		Power
	Disc		Media
	Subtitle		Subt
	Angle		TV/R
	Zoom		Eject
	Audio		Dual
	Disc Menu		D. Menu
	Setup		Options
	Return/Title		Back
	Display		Info
	Up		Up
	Down		Down
	Right		Right
	Left		Left
	OK		Ok
	I<<		I<<
	Play		Play

**Originalfernbedienung    Ersatzfernbedienung**

	>>I		>>I
	Pause		Pause
	Stop		Stop
	Vol+		Vol +
	Vol-		Vol -
	Mute		Mute
	1		1
	2		2
	3		3
	4		4
	5		5
	6		6
	7		7
	8		8
	9		9
	0		0
	Program		Sleep





**Originalfernbedienung**   **Ersatzfernbedienung**

	Repeat		Text
	Surr.		Red
	Sound	+	Shift + Dual
	Vocal		Yellow
	Karaoke		Blue

**Originalfernbedienung**   **Ersatzfernbedienung**



 
 

 
 



 

 
 


 


 

 
 
 





**Originalfernbedienung    Ersatzfernbedienung**

	Power		Power
	Tuner		Media
	Display		Info
	Up		Up
	Down		Down
	Right		Right
	Left		Left
	OK		Ok
	I<<		I<<
	Play		Play
	>>I		>>I
	Stop		Stop
	Vol+		Vol +
	Vol-		Vol -
	Mute		Mute
	1		1
	2		2


**Originalfernbedienung    Ersatzfernbedienung**

	3		3
	4		4
	5		5
	6		6
	7		7
	8		8
	9		9
	0		0
	Program		Sleep
	Surr.		Red
	Sound		Dual


 

 

 

 
 

 

 

 



 

 





**Originalfernbedienung Ersatzfernbedienung**

	Power		Power
	TV		Media
	Setup		Options
	Display		Info
	Up		Up
	Down		Down
	Right		Right
	Left		Left
	OK		Ok
	I<<		I<<
	Play		Play
	>>I		>>I
	Stop		Stop
	Tv Vol+		Vol +
	Tv Vol-		Vol -
	Mute		Mute
	1		1

**Originalfernbedienung Ersatzfernbedienung**

	2		2
	3		3
	4		4
	5		5
	6		6
	7		7
	8		8
	9		9
	0		0
	Surr.		Red
	Sound		Dual








 

 



 





 
 
 
 
 




**Originalfernbedienung   Ersatzfernbedienung**

	Power		Power
	AUX/DI		Media
	Display		Info
	Up		Up
	Down		Down
	Right		Right
	Left		Left
	OK		Ok
	I<<		I<<
	Play		Play
	>>I		>>I
	Stop		Stop
	Vol+		Vol +
	Vol-		Vol -
	Mute		Mute
	1		1
	2		2

**Originalfernbedienung   Ersatzfernbedienung**

	3		3
	4		4
	5		5
	6		6
	7		7
	8		8
	9		9
	0		0
	Program		Sleep
	Surr.		Red
	Sound		Dual

