



 





 






 
 






 
 
 

 




Originalfernbedienung Ersatzfernbedienung

	Power		Power
	[+]/Aspect		3D
	Input TV		TV/R
	Input AV		AV
	Menu		Menu
	[≡]/Text		Text
	[≡◆]/STTL		Subt
	APPS		Media
	i		Info
	X/Exit		Exit
	Option		Options
	Back/Return		Back
	Netflix		Shift + Smart
	Home		Smart
	Guide		Guide
	Up		Up
	Down		Down

Originalfernbedienung Ersatzfernbedienung

	Right		Right
	Left		Left
	OK		Ok
	Red		Red
	Green		Green
	Yellow		Yellow
	Blue		Blue
	Vol+		Vol +
	Vol-		Vol -
	Mute		Mute
	CH+		Ch +
	CH-		Ch -
	1		1
	2		2
	3		3
	4		4
	5		5





Originalfernbedienung Ersatzfernbedienung

6 _{mno}	6	6	6
7 _{pqrs}	7	7	7
8 _{tuv}	8	8	8
9 _{wxyz}	9	9	9
0	0	0	0
? eHELP	?/Help	SOUND DUAL	Dual
↻ LAST VIEW	Last View	FAV PRE-CH	Pre Ch
⏪	<<	⏪	<<
▶	Play	PLAY MODE ▶	Play
⏩	>>	⏩	>>
⏮	I<<	⏮	I<<
⏸	Pause	⏸	Pause
⏭	>>I	⏭	>>I
■	Stop	■	Stop
●	Rec	REC MODE ●	Rec
MY APP 🔍	My APP	SHIFT + APP MEDIA	Shift + Media

Originalfernbedienung Ersatzfernbedienung

