


 

 

 

 
 






 











 
 




Originalfernbedienung Ersatzfernbedienung

	Power		Power
	Mute		Mute
	TV/AV		AV
	Multimedia		Media
	I/II		Dual
	List		List
	Menu		Menu
	Q.View		Options
	OK		Ok
	Up		Up
	Down		Down
	Right		Right
	Left		Left
	PR+		Ch +
	PR-		Ch -
	Vol+		Vol +
	Vol-		Vol -

Originalfernbedienung Ersatzfernbedienung

	1		1
	2		2
	3		3
	4		4
	5		5
	6		6
	7		7
	8		8
	9		9
	0		0
	SSM		Guide
	PSM		Pre Ch
	ARC		Back
	Sleep		Sleep
	Text		Text
	[≡x]/Update		Subt
	[≡o]/Time		TV/R



