

 





 
 
 




Originalfernbedienung Ersatzfernbedienung

	Standby		Power
	Input Up		Ch +
	Input Down		Ch -
	Timer		AV
	Up		Up
	Down		Down
	Enter		Ok
	Random CD		Options
	Stop CD		Stop
	Pause CD		Pause
	Play CD		Play
	Memory CD		Rec
	Repeat CD		Text
	I<< CD		I<<
	>>I CD		>>I
	Scroll MD		Subt
	Stop MD		Blue

Originalfernbedienung Ersatzfernbedienung

	Pause MD		Yellow
	Play MD		Green
	Play Mode MD		Dual
	Repeat MD		Shift + Text
	I<< MD		<<
	>>I MD		>>
	Sleep		Sleep
	A.Presence		Info
	Clock Call		Media
	Volume Up		Vol +
	Volume Down		Vol -
	Muting		Mute
	Stop CDR		1
	Pause CDR		2
	Play CDR		3
	Play Mode CDR		7
	Repeat CDR		4





Originalfernbedienung Ersatzfernbedienung

	I<< CDR	5	5
	>>I CDR	6	6
	< Tape	GUIDE	Guide
	Stop Tape	0	0
	Tape >	FAV PRE-CH	Pre Ch
	<< Tape	8	8
	>> Tape	9	9
	Tuner Preset Up	Right Arrow	Right
	Tuner Preset	Left Arrow	Left

Originalfernbedienung Ersatzfernbedienung

