






 



 
 
 

 

 

 



 





 
 










 
 
 

 
 






 








 



Originalfernbedienung Ersatzfernbedienung

	Power		Power
	Mute		Mute
	Source		AV
	P Mode		Format
	S Mode		Shift + Dual
	Audio I / II		Dual
	Sleep		Sleep
	1		1
	2		2
	3		3
	4		4
	5		5
	6		6
	7		7
	8		8
	9		9
	0 / 10		0

Originalfernbedienung Ersatzfernbedienung

	-/-- / +10		Shift + Guide
	Recall / Program		Back
	TV Menu		Menu
	Exit		Exit
	Goto / Text		Text
	Display		Info
	Up		Up
	Down		Down
	Right		Right
	Left		Left
	OK / Enter		Ok
	V -		Vol -
	V +		Vol +
	P -		Ch -
	P +		Ch +
	Red / DVD		Red
	Green / A-B		Green





Originalfernbedienung Ersatzfernbedienung

	Yellow / Angle		Yellow
	Blue / Repeat		Blue
	Subtitle		Subt
	Play / Pause /		Play
	Size		3D
	D.Dis / Reveal		Smart
	D.Menu / Mix		D. Menu
	Zoom / Index	+	Shift + Eject
	I<< / Fav		I<<
	I<< / Fav		Pre Ch
	>>I / Subpage		>>I
	Stop / Language		Stop
	<< / Fav -		<<
	>> / Fav +		>>
	Eject / EPG		Guide
	Eject / EPG		Eject

Originalfernbedienung Ersatzfernbedienung

