




Originalfernbedienung Ersatzfernbedienung

	Standby / On		Power
	Open / Close		Eject / Surround
	1 / ATR TRK -		1
	2 / ATR		2
	3 / ATR TRK +		3
	Volume +		Vol+
	4 / Shuttle <<		4
	5 / Shuttle		5
	6 / Shuttle >>		6
	Prog +		CH+ / Page+
	Volume -		Vol-
	Prog -		CH- / Page-
	7 / SVHS		7
	8		8
	9		9
	Mute		Mute / Dimmer
	3D Sound		D.Menu / Top

Originalfernbedienung Ersatzfernbedienung

	Last PR		Smart / List
	0 / A.DUB		0
	TV / VCR		AV / Input / RDS
	DVD		Shift + 2
	TV View		TV/Radio /
	VCR		Shift + 4
	<<		<< / Tune-
	Stop		Stop / Hold
	Play / Pause		Play / Slow
	Play / Pause		Pause / Step / Freeze
	>>		>> / Tune+
	I<< / Rec		I<< / Preset-
	I<< / Rec		Rec / Rec Mode
	Angle / Timer		Info / Angle
	Angle / Timer		Sleep / Timer
	>>I / Frame/Step		>>I / Preset+
	Zoom / Speed		Zoom / Size



