


 







 



 




 

 
 
 
 
 











Originalfernbedienung Ersatzfernbedienung




 




 
 

 

 

 

 
 
 

 

 





 
	Power		Power
	Imagen		Format
	Sonido		Dual
	Tamaño		3D
	Guía		Guide
	Red		Red
	Green		Green
	Yellow		Yellow
	Blue		Blue
	I<<		I<<
	>>I		>>I
	<<		<<
	>>		>>
	DTV/Radio		TV/R
	Fuente		AV
	Info		Info
	Menu		Menu

Originalfernbedienung Ersatzfernbedienung

	Salir		Exit
	Up		Up
	Down		Down
	Right		Right
	Left		Left
	OK		Ok
	Audio		Shift + Dual
	Play		Play
	Pause/TS		Pause
	Stop		Stop
	Rec		Rec
	Sub.		Subt
	List		List
	FAV.		Pre Ch
	Vol+		Vol +
	Vol-		Vol -
	Mute		Mute





Originalfernbedienung	Ersatzfernbedienung	Originalfernbedienung	Ersatzfernbedienung
	P+		Ch +
	P-		Ch -
	Text		Text
	1		1
	2		2
	3		3
	4		4
	5		5
	6		6
	7		7
	8		8
	9		9
	0		0
	Sleep		Sleep
	Recall		Back

