 

 

 







 

 


 




 




 







Originalfernbedienung Ersatzfernbedienung

	Standby		Power
	Source		AV / Input / RDS
	Red		Red / Netflix / Search
	Green		Green / APP / Repeat
	Yellow		Yellow / YouTube / Repeat
	Blue		Blue / Prime Video / Random
	P Mode		Picture / Format
	S Mode		Sound / Title
	Freeze		Pause / Step / Freeze
	TXT		Text / Goto
	Mix / Fav List		Fav / Marker / PC
	Size / Subtitle		Zoom / Size
	Cancel / Audio		Shift + Exit / Cancel / Clear
	Record		Rec / Rec Mode
	<< / Index		<< / Tune-
	>> / Hold		>> / Tune+
	I<< / Reveal		I<< / Preset-

Originalfernbedienung Ersatzfernbedienung

	>>I / Subpage		>>I / Preset+
	Menu		Menu / Home
	Exit		Exit / Cancel / Clear
	Up		Up
	Left		Left
	Enter		OK
	Right		Right
	Play/Pause / Timeshift		Play / Slow
	Play/Pause / Timeshift		Shift + Play /
	Down		Down
	Stop / EPG		Shift + Stop /
	Stop / EPG		Stop / Hold
	Vol +		Vol+
	Mute		Mute / Dimmer
	CH +		CH+ / Page+
	Vol -		Vol-
	TV / Radio		TV/Radio /



