 

 



 

 


 


 

 


 
 
 



 
 
 

 





 

 
 




Originalfernbedienung Ersatzfernbedienung

	On/Standby		Power
	Sleep		Sleep
	CBL/SAT		1
	DVD		2
	Blu-ray		3
	Game		4
	AUX		AV
	Media Player		5
	TV Audio		TV/R
	CD		6
	Tuner		7
	iPod/USB		8
	Phono		9
	M-XPort		Guide
	Network		0
	Internet Radio		Pre Ch
	CH+		Ch +

 

 



 
 
 
 
 

 

 

 

 

 



 
 




 



Originalfernbedienung Ersatzfernbedienung

	CH-		Ch -
	Mute		Mute
	Vol+		Vol +
	Vol-		Vol -
	Info		Info
	Option		Options
	Up		Up
	Down		Down
	Right		Right
	Left		Left
	OK		Ok
	Back		Back
	Setup		Menu
	>>I/Tune+		>>I
	I<</Tune-		I<<
	Play		Play
	Pause		Pause



 

 

 

 
 
 





 

 

 

 


 
 

 
 
 
 






Originalfernbedienung Ersatzfernbedienung

	On/Standby		Power
	Sleep		Sleep
	CBL/SAT		1
	DVD		2
	Blu-ray		3
	Game		4
	AUX		AV
	Media Player		5
	TV Audio		TV/R
	CD		6
	Tuner		7
	iPod/USB		8
	Phono		9
	M-XPort		Guide
	Network		0
	Internet Radio		Pre Ch
	CH+		Ch +

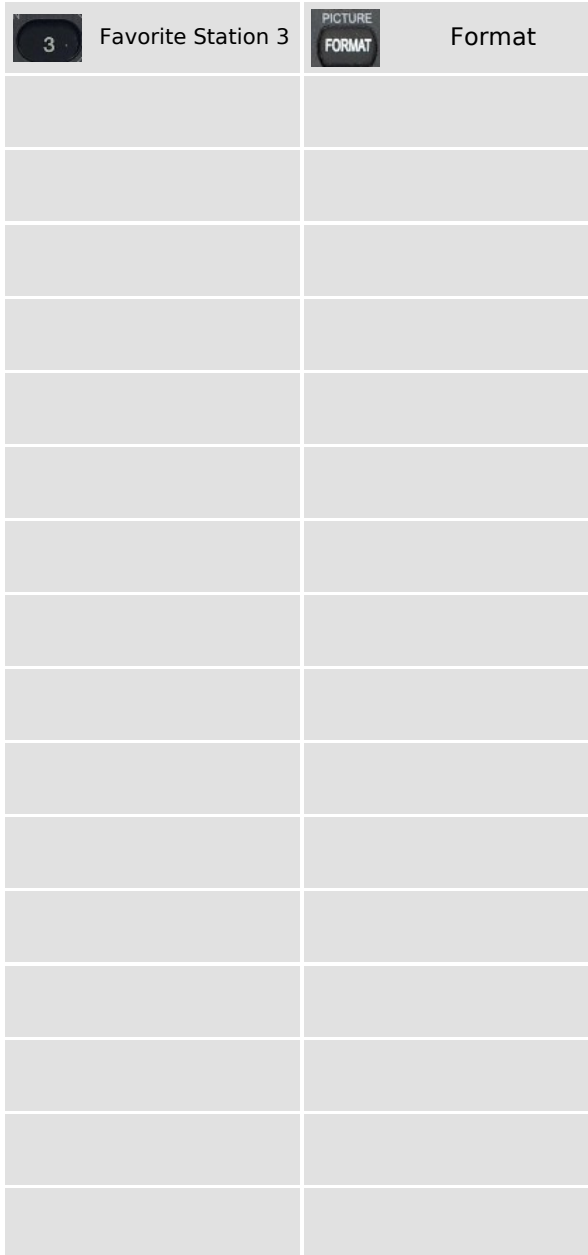 
Originalfernbedienung Ersatzfernbedienung

	CH-		Ch -
	Mute		Mute
	Vol+		Vol +
	Vol-		Vol -
	Option		Options
	Up		Up
	Down		Down
	Right		Right
	Left		Left
	Enter		Ok
	Back		Back
	>>I/Tune+		>>I
	I<</Tune-		I<<
	Play		Play
	Pause		Pause
	Favorite Station 1		List
	Favorite Station 2		Dual





Originalfernbedienung Ersatzfernbedienung



Originalfernbedienung Ersatzfernbedienung

