



















 







 














 


 
 







**Originalfernbedienung Ersatzfernbedienung**

	Power		Power
	Mute		Mute / Dimmer
	HDTV		AV / Input / RDS
	Movie		Smart / List
	♪/Music		Sound / Title
	Photo		Display / Media
	1		1
	2		2
	3		3
	4		4
	5		5
	6		6
	7		7
	8		8
	9		9
	16:9/4:3		Picture / Format
	0		0

**Originalfernbedienung Ersatzfernbedienung**

	Zoom		Zoom / Size
	I<<		I<< / Preset-
	Up/Timeshift		Up
	>>I		>>I / Preset+
	Left/<</Jump		Left
	OK		OK
	Play		Play / Slow
	Pause		Pause / Step / Freeze
	Right/>>/Sort		Right
	Vol+		Vol+
	Down		Down
	Tv CH+		CH+ / Page+
	Vol-		Vol-
	Stop		Stop / Hold
	Return		Back / Return
	Tv CH-		CH- / Page-
	Info		Info / Angle



