



Originalfernbedienung Ersatzfernbedienung

	Standby		Power
	Off		Shift + Power
	1		1
	2		2
	3		3
	4		4
	5		5
	6		6
	7		7
	8		8
	9		9
	0		0
	_/_-/-/Del		Guide
	Mute		Mute
	Vol+		Vol +
	Vol-		Vol -
	Content (Home)		Smart

Originalfernbedienung Ersatzfernbedienung

	Source		AV
	CH+		Ch +
	CH-		Ch -
	Magicinfo/Lite /S		Media
	Menu		Menu
	Blank		Pre Ch
	Tools		Options
	Info		Info
	Return		Back
	Exit		Exit
	Up		Up
	Down		Down
	Right		Right
	Left		Left
	Enter		Ok
	Red/PC		Red
	Green/DVI		Green





Originalfernbedienung Ersatzfernbedienung

Originalfernbedienung	Ersatzfernbedienung
Yellow/HDMI	Yellow
Blue/DP	Blue
Magicinfo	TV/R
3D	3D
Lock	Eject
Stop	Stop
<</ <<	<<
Play	Play
Pause	Pause
>>/>>	>>

Originalfernbedienung Ersatzfernbedienung

Originalfernbedienung	Ersatzfernbedienung

