







 

 
 
 
 
 





Originalfernbedienung Ersatzfernbedienung

	Power		Power
	Play Function		Yellow
	Play Tape B		Green
	Play Tuner / Band		TV/R
	Play Tape A		Red
	Flash		Info
	Loop		Back
	File Select		Media
	Mode Select		Smart
	Vol +		Vol +
	Vol -		Vol -
	Up		Up
	Down		Down
	Right		Right
	Left		Left
	Enter		Ok
	>>		>>

Originalfernbedienung Ersatzfernbedienung

	<<		<<
	>> / +		>>
	<< / -		<<
	Stop		Stop
	Pause		Pause
	Play CD		Play
	Disc Skip		Exit
	Sleep		Sleep

