 
















 



 



 


 









Originalfernbedienung Ersatzfernbedienung

	Standby		Power
	DTV/VCR		Smart
	Text		Text
	Vol+		Vol +
	Vol-		Vol -
	Mute		Mute
	Info		Info
	EPG		Guide
	Play		Play
	Pause		Pause
	Stop		Stop
	<<		<<
	>>		>>
	I<<		I<<
	>>I		>>I
	Setup		Menu
	Exit		Exit

Originalfernbedienung Ersatzfernbedienung

	Source		AV
	Tv/Radio		TV/R
	CH+		Ch +
	CH-		Ch -
	Up		Up
	Down		Down
	Right/FAV+		Right
	Left/FAV-		Left
	Enter		Ok
	1		1
	2		2
	3		3
	4		4
	5		5
	6		6
	7		7
	8		8





Originalfernbedienung Ersatzfernbedienung

9	9	9	9
0	0	0	0
RECALL	Recall	RETURN BACK	Back
GOTO	Goto	ECO 3D	3D
FAVORITE	Favorite	FAV PRE-CH	Pre Ch
MODE	Mode	APP MEDIA	Media
AUDIO	Audio	SHIFT + SOUND DUAL	Shift + Dual
LANGUAGE	Language	SOUND DUAL	Dual
REPEAT	Red/Repeat	A	Red
A-B	Green/A-B	B	Green
ZOOM	Yellow/Zoom	C	Yellow
SUBTITLE	Blue/Subtitle	D	Blue

Originalfernbedienung Ersatzfernbedienung