



Originalfernbedienung Ersatzfernbedienung

M.SCAN	M.Scan	HOME SMART	Smart
FADER	Fader	MUTE	Mute
CONTINUE	Continue	AD SUBT	Subt
SHUFFLE	Shuffle	PICTURE FORMAT	Format
PROGRAM	Program	PROG SLEEP	Sleep
1	1	1	1
2	2	2	2
3	3	3	3
4	4	4	4
5	5	5	5
6	6	6	6
7	7	7	7
8	8	8	8
9	9	9	9
10	10	0	0
>10	>10	-/-- GUIDE	Guide
A.SPACE	A.Space	SEARCH TV/R	TV/R

Originalfernbedienung Ersatzfernbedienung

TIME	Time	TIMER AV	AV
A-B	A-B	ECO 3D	3D
REPEAT	Repeat	REPEAT TEXT	Text
▶	Play	PLAY MODE ▶	Play
⏸	Pause	⏸	Pause
■	Stop	■	Stop
⏮ AMS	I<< AMS	⏮	I<<
AMS ⏭	AMS >>I	⏭	>>I
⏪	<<	⏪	<<
⏩	>>	⏩	>>
LINE OUT LEVEL +	Line Out Level+	+ CH	Ch +
LINE OUT LEVEL -	Line Out Level-	CH -	Ch -

