
 



 



 

 

 

 





 











 




Originalfernbedienung Ersatzfernbedienung

	Power		Power
	Enhancer		Media
	Beam		Smart
	HDMI1		1
	HDMI2		2
	Optical		5
	HDMI3		3
	HDMI4		4
	Analog		6
	TV		7
	AUX		8
	YIT		9
	Movie		Red
	Music		Green
	Entertainment		Yellow
	Off		Blue
	Surround		Subt

Originalfernbedienung Ersatzfernbedienung

	Stereo		Dual
	Setup		Menu
	Return		Back
	Target		Guide
	Option		Options
	Info		Info
	Up		Up
	Down		Down
	Right		Right
	Left		Left
	Enter		Ok
	Subwoofer+		Ch +
	Subwoofer-		Ch -
	Vol+		Vol +
	Vol-		Vol -
	Mute		Mute
	Uni Volume		Pre Ch





**Originalfernbedienung Ersatzfernbedienung**

	System Memory	+	Shift + 1
	System Memory	+	Shift + 2
	System Memory	+	Shift + 3
	FM		3D
	< Preset	+	Shift + Left
	Preset >	+	Shift + Right
	Memory		Rec
	<< Tuning	+	Shift + <<
	Tuning >>	+	Shift + >>
	CH Level		Text
	Remote		AV
	Eco	+	Shift + 3D
	USB		TV/R
	Play		Play
	iPod Control		D. Menu
	<<		<<
	Stop		Stop

**Originalfernbedienung Ersatzfernbedienung**

	>>		>>
	<<		<<
	Pause		Pause
	>>		>>

