






 



 
 
 

 




Originalfernbedienung Ersatzfernbedienung

STEP	Step		Power
SEARCH	Search		TV/R
MUTE	Mute		Mute
SOURCE	Source		AV
1	1		1
2	2		2
3	3		3
4	4		4
5	5		5
6	6		6
7	7		7
8	8		8
9	9		9
0	0		0
10+	10+		Guide
DISPLAY	Display		Info
SUBTITLE	Subtitle		Subt

Originalfernbedienung Ersatzfernbedienung

ANGLE	Angle		Red
AUDIO	Audio		Dual
MENU /PBC	Menu PBC		Menu
TITLE	Title		3D
MODE	Mode		Exit
SETUP	Setup		Options
VOL+	Vol+		Vol +
VOL-	Vol-		Vol -
REPEAT	Repeat		Text
(SLOW	Slow		Format
PROGRAM	Program		Sleep
ZOOM	Zoom		Eject
	Up		Up
	Down		Down
	Right		Right
	Left		Left
ENTER	Enter		Ok





Originalfernbedienung Ersatzfernbedienung

	Play		Play
	Pause		Pause
	Stop		Stop
	>>		>>
	<<		<<
	>>		>>
	<<		<<

Originalfernbedienung Ersatzfernbedienung

