





Originalfernbedienung Ersatzfernbedienung

	Power		Power
	Tv/SAT		Smart
	Mute		Mute
	TV/R		TV/R
	Goto		Options
	Audio		Dual
	Aspect		3D
	Info		Info
	1		1
	2		2
	3		3
	4		4
	5		5
	6		6
	7		7
	8		8
	9		9

 




 
 







 

 

 
Originalfernbedienung Ersatzfernbedienung

	0		0
	P+		Ch +
	P-		Ch -
	Recall		Back
	DEV		Media
	Up/CH+		Up
	Down/CH-		Down
	Right		Right
	Left		Left
	OK		Ok
	Vol+		Vol +
	Vol-		Vol -
	Menu		Menu
	EPG		Guide
	FAV		Pre Ch
	Exit		Exit
	TTX		Text





Originalfernbedienung Ersatzfernbedienung

	Red		Red
	Green		Green
	Yellow		Yellow
	Blue/Option		Blue
	Subt.		Subt
	Zoom		Eject
	<<		<<
	>>		>>
	Play		Play
	Pause		Pause
	Stop		Stop
	Rec		Rec
	MP		AV
	V-Format		Format
	A1		List
	B2		Sleep

Originalfernbedienung Ersatzfernbedienung

