





 













Originalfernbedienung Ersatzfernbedienung

	Power		Power
	CBL/SAT		Shift + 1
	DVD		Shift + 2
	Tv Audio		Dual
	Blu-ray		Shift + 3
	AUX1		Shift + 4
	Tuner		Shift + 5
	Bluetooth		Shift + 6
	Game		Shift + 7
	AUX2		Shift + 8
	Phono		Shift + 9
	USB		Pre Ch
	Media Player		Media
	CD		Guide
	Heos		Shift + 0
	Internet Radio		TV/R
	CH/Page+		Ch +



Originalfernbedienung Ersatzfernbedienung

	CH/Page-		Ch -
	Sleep		Sleep
	Eco		3D
	Vol+		Vol +
	Vol-		Vol -
	Mute		Mute
	Info		Info
	Option		Options
	Back		Back
	Setup		Menu
	Up		Up
	Down		Down
	Right		Right
	Left		Left
	Enter		Ok
	Home		Smart
	Stop		Stop





Originalfernbedienung Ersatzfernbedienung

	Power		Power
	CBL/SAT		Shift + 1
	DVD		Shift + 2
	Tv Audio		Dual
	Blu-ray		Shift + 3
	AUX1		Shift + 4
	Tuner		Shift + 5
	Bluetooth		Shift + 6
	Game		Shift + 7
	AUX2		Shift + 8
	Phono		Shift + 9
	USB		Pre Ch
	Media Player		Media
	CD		Guide
	Internet Radio		Shift + 0
	Internet Radio		TV/R
	CH/Page+		Ch +

 





 







 




Originalfernbedienung Ersatzfernbedienung

	CH/Page-		Ch -
	Sleep		Sleep
	Vol+		Vol +
	Vol-		Vol -
	Mute		Mute
	Up		Up
	Down		Down
	Right		Right
	Left		Left
	Enter		Ok
	Back		Back
	Home		Smart
	Stop		Stop
	Pause		Pause
	Play		Play
	I<</Tune-		I<<
	>>/Tune+		>>I







Originalfernbedienung Ersatzfernbedienung

	Power		Power
	CBL/SAT		Shift + 1
	DVD		Shift + 2
	Tv Audio		Dual
	Blu-ray		Shift + 3
	AUX1		Shift + 4
	Tuner		Shift + 5
	Bluetooth		Shift + 6
	Game		Shift + 7
	AUX2		Shift + 8
	Phono		Shift + 9
	USB		Pre Ch
	Media Player		Media
	CD		Guide
	Internet Radio		Shift + 0
	Internet Radio		TV/R
	CH/Page+		Ch +

Originalfernbedienung Ersatzfernbedienung

	CH/Page-		Ch -
	Sleep		Sleep
	Vol+		Vol +
	Vol-		Vol -
	Mute		Mute
	Up		Up
	Down		Down
	Right		Right
	Left		Left
	Enter		Ok
	Back		Back
	Home		Smart
	Stop		Stop
	Pause		Pause
	Play		Play
	I<</Tune-		I<<
	>>/Tune+		>>I



