



Originalfernbedienung Ersatzfernbedienung

	Power		Power
	Mute		Mute / Dimmer
	1		1
	2		2
	3		3
	4		4
	5		5
	6		6
	7		7
	8		8
	9		9
	Text		Text / Goto
	0		0
	Recall		Back / Return
	P.Mode		Picture / Format
	S.Mode		Sound / Title
	Audio		Audio / Lang I/II

Originalfernbedienung Ersatzfernbedienung

	Sleep		Sleep / Timer
	Source		AV / Input / RDS
	CH+		CH+ / Page+
	Vol+		Vol+
	Display		Display / Media
	CH-		CH- / Page-
	Vol-		Vol-
	Red		Red / Netflix / Search
	Green		Green / APP / Repeat
	Yellow		Yellow / YouTube / Repeat
	Blue		Blue / Prime Video / Random
	Up		Up
	Down		Down
	Right		Right
	Left		Left
	Menu		Menu / Home
	OK		OK




**Originalfernbedienung Ersatzfernbedienung**

	Exit		Exit / Cancel / Clear
	Subtitle		Subtitle / EQ
	Index		Info / Angle
	Size		Zoom / Size
	Reveal		D.Menu / Top
	Mix		Setup / OPT /
	Play		Play / Slow
	Pause/Hold		Pause / Step / Freeze
	I<</Cancel		I<< / Preset-
	>>I/Subpage		>>I / Preset+
	EPG		Guide / EPG / -/--
	FAV		Fav / Marker / PC
	Stop		Stop / Hold
	<</FAV-		<< / Tune-
	>>/FAV+		>> / Tune+
	Media	+	Shift + Display / Media
	Rec		Rec / Rec Mode

**Originalfernbedienung Ersatzfernbedienung**

	Timeshift		Smart / List
	Tv/Radio		TV/Radio /

