


Originalfernbedienung Ersatzfernbedienung

	Standby/On		Power
	1/5Beam		1
	2/ST+3Beam		2
	3/3Beam		3
	4/Stereo		4
	5/My Beam		5
	6/My Sur.		6
	+10		Guide
	Sur Decode		Pre Ch
	Vol+		Vol +
	Vol-		Vol -
	CH Level		Info
	Menu		Menu
	Test		Exit
	Return		Back
	Up		Up
	Enter		Ok

Originalfernbedienung Ersatzfernbedienung

	Down		Down
	Right		Right
	Left		Left
	Tv Vol+		Shift + Vol +
	Tv Vol-		Shift + Vol -
	Tv Mute		Shift + Mute
	Mute		Mute
	Tv Input		AV
	<< DVD		<<
	Stop DVD		Stop
	>> DVD		>>
	I<< DVD		I<<
	>> I DVD		>> I
	Pause DVD		Pause
	Play DVD		Play
	Power AV DVD		Shift + Power
	VCR		Green


 

 
 

 



 
 


 
 



 







Originalfernbedienung Ersatzfernbedienung

	TV		TV/R
	DVD		Blue
	STB		Yellow
	AUX		Red
	Tv Input 1		List
	Tv Input 2		Dual
	Vol Mode		Subt
	Auto Setup		Options
	Input Mode		Format
	Sleep		Sleep
	Power TV		Media
	Power AV VCR		Smart
	CH+ VCR		Ch +
	CH- VCR		Ch -
	Stop VCR		Shift + Stop
	Pause VCR		Shift + Pause
	Play VCR		Shift + Play

Originalfernbedienung Ersatzfernbedienung

	>> VCR		Shift + >>
	Stop Tv		Shift + Left
	<< VCR		Shift + <<
	Pause Tv		Shift + Right
	Power AV AUX		Shift + Smart
	Play Tv		Shift + Ok
	CH+ AUX		Shift + Ch +
	CH- AUX		Shift + Ch -
	CH+ Tv		Shift + Up
	CH- Tv		Shift + Down
	<< Tv		Shift + I<<
	>> Tv		Shift + >>I
	I<< Tv		Text
	>>I Tv		3D





Originalfernbedienung Ersatzfernbedienung

	Power Tv		Power
	Standby/On	 + 	Shift + Power
	AUX		Red
	Vol Mode		Subt
	Auto Setup		Options
	Input Mode		Format
	Sleep		Sleep
	1		1
	2		2
	3		3
	4		4
	5		5
	6		6
	7		7
	8		8
	9		9
	0		0

Originalfernbedienung Ersatzfernbedienung

	+10		Guide
	Sur Decode		Pre Ch
	CH Level		Info
	Menu		Menu
	Test		Exit
	Return		Back
	Up		Up
	Down		Down
	Right		Right
	Left		Left
	Enter		Ok
	CH+		Ch +
	CH-		Ch -
	Tv Vol+		Vol +
	Tv Vol-		Vol -
	Tv Mute		Mute
	Tv Input		AV



