


 
 

 





 

 








 


 
 
 
 


 
 




Originalfernbedienung Ersatzfernbedienung

	Standby/On		Power
	1		1
	2		2
	3		3
	4		4
	5		5
	6		6
	7		7
	8		8
	9		9
	10		0
	+10		Guide
	+100		Pre Ch
	Display		Info
	Sleep		Sleep
	A.P.S.		Media
	Clock/Timer		AV

Originalfernbedienung Ersatzfernbedienung

	Menu/Bluetooth Setting		Menu
	Gt.AMP Mode		D. Menu
	Cancel		Exit
	Up		Up
	Down		Down
	>>/>>I		>>
	I<</<<		<<
	SET		Ok
	Tuner		TV/R
	Audio In		3D
	Play/Pause		Red
	Play/Pause CD		Play
	Play/Pause iPod		Green
	Play/Pause Bluetooth		Pause
	Play/Pause Metronome		Yellow
	Stop		Stop
	FM Mode		Format





Originalfernbedienung Ersatzfernbedienung

 PLAY MODE	Play Mode	 + 	Shift + Play
 REPEAT	Repeat		Text
 SOUND MODE	Sound Mode		Dual
 REC/DELETE	Rec/Delete		Rec
 REC SPEED	Rec Speed		Blue
 REC MODE	Rec Mode	 + 	Shift + Rec
 TREBLE+	Treble+		Ch +
 TREBLE-	Treble-		Ch -
 BASS+	Bass+		Right
 BASS-	Bass-		Left
 SUPER WOOFER VOLUME+	Super Woofer Volume+	 + 	Shift + Vol +
 SUPER WOOFER VOLUME-	Super Woofer Volume-	 + 	Shift + Vol -
 VOL+	Vol+		Vol +
 VOL-	Vol-		Vol -
 MUTING	Muting		Mute

Originalfernbedienung Ersatzfernbedienung

