

 



 




 


 




 

 
 

 

 


 

 
 
 



 
 
 
 


 
 
 

 

 
 




 







 






Originalfernbedienung Ersatzfernbedienung



 





 
 
 
 
 
 
 
 
 


 


 


 



 


	Power		Power
	Input		AV
	Digital/Analog		TV/R
	Sync Menu		Menu
	1		1
	2		2
	3		3
	4		4
	5		5
	6		6
	7		7
	8		8
	9		9
	0		0
	Exit		Exit
	[≡]		Text
	Red		Red

Originalfernbedienung Ersatzfernbedienung

	Green		Green
	Yellow		Yellow
	Blue		Blue
	YouTube		Media
	Netflix		Shift + Media
	Sleep		Sleep
	Info		Info
	Guide		Guide
	Options		Options
	Home		Smart
	Return		Back
	Up		Up
	Down		Down
	Right		Right
	Left		Left
	Ok		Ok
	Vol+		Vol +





Originalfernbedienung	Ersatzfernbedienung	Originalfernbedienung	Ersatzfernbedienung
	Vol-		Vol -
	Mute		Mute
	Recall		Pre Ch
	CH+		Ch +
	CH-		Ch -
	Audio		Dual
	[...]		Subt
	Title List		List
	<<		<<
	Play		Play
	>>		>>
	l<<		l<<
	Pause		Pause
	>>l		>>l
	Rec		Rec
	Stop		Stop
	[+]		3D

