 
 


 




Originalfernbedienung Ersatzfernbedienung

	Power		Power
	Source		AV
	[+]		3D
	I<<		I<<
	>>I		>>I
	<<		<<
	>>		>>
	Stop		Stop
	Play		Play
	Pause		Pause
	Red		Red
	Green		Green
	Yellow		Yellow
	Blue		Blue
	Repeat		Shift + Text
	Audio		Dual
	Guide		Guide

Originalfernbedienung Ersatzfernbedienung

	[i+]/[?]		Info
	Return		Back
	Zoom		Eject
	Menu		Menu
	Up		Up
	Down		Down
	Right		Right
	Left		Left
	OK		Ok
	1		1
	2		2
	3		3
	4		4
	5		5
	6		6
	7		7
	8		8




Originalfernbedienung Ersatzfernbedienung

9	9	9	9
0	0	0	0
0	FAV	SHIFT + FAV PRE-CH	Shift + Pre Ch
[≡]	[≡]	REPEAT TEXT	Text
[...]	[...]	AD SUBT	Subt
+	Vol+	+ VOL	Vol +
-	Vol-	VOL -	Vol -
[Mute]	Mute	MUTE	Mute
PROG +	Prog+	+ CH	Ch +
PROG -	Prog-	CH -	Ch -
[Recall]	Recall	FAV PRE-CH	Pre Ch

Originalfernbedienung Ersatzfernbedienung

