
















 



 






Originalfernbedienung Ersatzfernbedienung

	Power		Power
	Mute		Mute / Dimmer
	1		1
	2		2
	3		3
	4		4
	5		5
	6		6
	7		7
	8		8
	9		9
	Text		Text / Goto
	0		0
	Recall		Back / Return
	Imagen		Picture / Format
	Sonido		Sound / Title
	Audio		Audio / Lang I/II

Originalfernbedienung Ersatzfernbedienung

	Sleep		Sleep / Timer
	Fuente		Shift + Subtitle / EQ
	P+		CH+ / Page+
	Vol+		Vol+
	Info		Info / Angle
	P-		CH- / Page-
	Vol-		Vol-
	Red		Red / Netflix / Search
	Green		Green / APP / Repeat
	Yellow		Yellow / YouTube / Repeat
	Blue		Blue / Prime Video / Random
	Up		Up
	Left		Left
	OK		OK
	Right		Right
	Menu		Menu / Home
	Down		Down



