




 
 

 

 

 

 



 
 
 
 
 





 

 





 

 




 





 

 





 
 
 

 


 
 
 





Originalfernbedienung Ersatzfernbedienung

	Power		Power
	Source		AV
	1		1
	2		2
	3		3
	4		4
	5		5
	6		6
	7		7
	8		8
	9		9
	0		0
	TV		TV/R
	Recall		Pre Ch
	Vol+		Vol +
	Vol-		Vol -
	Mute		Mute

Originalfernbedienung Ersatzfernbedienung

	Home/@		Smart
	+P		Ch +
	-P		Ch -
	Menu		Menu
	Q.Menu		D. Menu
	Back		Back
	Exit		Exit
	Up		Up
	Down		Down
	Right		Right
	Left		Left
	OK		Ok
	WWW		Media
	Music/Photo/Video		Options
	Guide		Guide
	Help		Info
	*/O		Format





Originalfernbedienung Ersatzfernbedienung

	[≡]		Text
	Red		Red
	Green		Green
	Yellow		Yellow
	Blue		Blue
	Lang.		Dual
	Sleep		Sleep
	[-O-]		Subt
	<<		<<
	Pause		Pause
	>>		>>
	Rec		Rec
	Play		Play
	Stop		Stop

Originalfernbedienung Ersatzfernbedienung

