





 









 




 


 
 
 
 


 

 



 

 
 


 
 

 

 





 




 
 



 

 
 





Originalfernbedienung Ersatzfernbedienung

	Power		Power
	Source		AV
	1		1
	2		2
	3		3
	4		4
	5		5
	6		6
	7		7
	8		8
	9		9
	0		0
	TV		TV/R
	Recall		Pre Ch
	Vol+		Vol +
	Vol-		Vol -
	Mute		Mute

Originalfernbedienung Ersatzfernbedienung

	Home/@		Smart
	+P		Ch +
	-P		Ch -
	Menu		Menu
	Q.Menu		D. Menu
	Back		Back
	Exit		Exit
	Up		Up
	Down		Down
	Right		Right
	Left		Left
	OK		Ok
	WWW		Media
	Music/Photo/Video		Options
	Guide		Guide
	Help		Info
	*/O		Format





Originalfernbedienung		Ersatzfernbedienung		Originalfernbedienung		Ersatzfernbedienung	
	[≡]		Text				
	Red		Red				
	Green		Green				
	Yellow		Yellow				
	Blue		Blue				
	Lang.		Dual				
	Sleep		Sleep				
	[-O-]		Subt				
	<<		<<				
	Pause		Pause				
	>>		>>				
	Rec		Rec				
	Play		Play				
	Stop		Stop				

