



Originalfernbedienung Ersatzfernbedienung

	Power		Power
	1		1
	2		2
	3		3
	4		4
	5		5
	6		6
	7		7
	8		8
	9		9
	0		0
	PIP		Smart
	TV/Radio		TV/R
	Text		Text
	?		D. Menu
	Up		Up
	Down		Down

Originalfernbedienung Ersatzfernbedienung

	Right		Right
	Left		Left
	OK		Ok
	Exit		Exit
	FAV		Pre Ch
	Mute		Mute
	Menu		Menu
	EPG		Guide
	Info		Info
	<<		<<
	<<		I<<
	Stop / Rec		Stop
	Stop / Rec		Rec
	Play / Pause		Play
	Play / Pause		Pause
	>>		>>
	>>I		>>I





Originalfernbedienung Ersatzfernbedienung

	Red		Red
	Green		Green
	Yellow		Yellow
	Blue		Blue

Originalfernbedienung Ersatzfernbedienung

