
 


 




Originalfernbedienung Ersatzfernbedienung

	Power		Power
	1		1
	2		2
	3		3
	4		4
	5		5
	6		6
	7		7
	8		8
	9		9
	0		0
	Recall		Back
	CH+		Ch +
	CH-		Ch -
	Up		Up
	Down		Down
	Right		Right

Originalfernbedienung Ersatzfernbedienung

	Left		Left
	OK		Ok
	Vol+		Vol +
	Vol-		Vol -
	Mute		Mute
	Menu		Menu
	Exit		Exit
	Pg Up		>>
	Pg Dn		<<
	Tv/Radio		TV/R
	Info		Info
	FAV		Pre Ch
	Audio		Dual
	SUB-T		Subt
	TTX		Text
	EPG		Guide
	List		List





Originalfernbedienung Ersatzfernbedienung

	Pause		Pause
	Sleep		Sleep
	Ratio		Format
	Red		Red
	Green		Green
	Yellow		Yellow
	Blue		Blue

Originalfernbedienung Ersatzfernbedienung

