













 

 
 

 




 









Originalfernbedienung Ersatzfernbedienung

	Standby		Power
	1/VCR/DVR		1
	2/CBL/SAT		2
	3/Game/TV		3
	4/AUX		4
	5/Multi CH		5
	6/DVD		6
	7/Tape		7
	8/Tuner		8
	9/CD		9
	+10/10/-/-/D.Tun		Guide / EPG / -/-
	0/11/Dimmer		0
	CLR/12/Sleep/Ent		Fav / Marker / PC
	CH Disc		CH+ / Page+
	CH Disc Album-		CH- / Page-
	Vol+		Vol+
	Vol-		Vol-

Originalfernbedienung Ersatzfernbedienung

	Up		Up
	Previous Menu/Muting		Menu / Home
	Left/Playlist/Cat		Left
	Enter		OK
	Right/Playlist/Cat		Right
	Setup		Setup / OPT /
	Down		Down
	Return		Back / Return
	Pause/<		Pause / Step / Freeze
	Play		Play / Slow
	Stop		Stop / Hold
	<<		<< / Tune-
	>>		>> / Tune+
	Stereo		Sound / Title
	Surround		Eject / Surround
	< Listening Mode		Shift + Left
	Listening Mode >		Shift + Right














 
 

 

 










**Originalfernbedienung Ersatzfernbedienung**

	Standby		Power
	1/VCR/DVR		1
	2/CBL/SAT		2
	3/Game/TV		3
	4/AUX		4
	5/Multi CH		5
	6/DVD		6
	7/Tape		7
	8/Tuner		8
	9/CD		9
	+10/10/-/-/D.Tun		Guide / EPG / -/-
	0/11/Dimmer		0
	CLR/12/Sleep/Ent		Fav / Marker / PC
	Guide/Top		D.Menu / Top
	Up		Up
	Previous Menu/Muting		Menu / Home
	Left/Playlist/Cat		Left

**Originalfernbedienung Ersatzfernbedienung**

	Enter		OK
	Right/Playlist/Cat		Right
	Setup		Setup / OPT /
	Down		Down
	Return		Back / Return
	Pause/<		Pause / Step / Freeze
	Play		Play / Slow
	Stop		Stop / Hold
	<<		<< / Tune-
	>>		>> / Tune+
	<<		<< / Preset-
	>>		>>  / Preset+
	Stereo		Sound / Title
	Surround		Eject / Surround
	< Listening Mode		CH- / Page-
	Listening Mode >		CH+ / Page+
	Test Tone/Audio		Audio / Lang I/II







 
 
 


 


 
 








**Originalfernbedienung Ersatzfernbedienung**

	Standby		Power
	1/VCR/DVR		1
	2/CBL/SAT		2
	3/Game/TV		3
	4/AUX		4
	5/Multi CH		5
	6/DVD		6
	7/Tape		7
	8/Tuner		8
	9/CD		9
	+10/10/-/-/D.Tun		Guide / EPG / -/-
	0/11/Dimmer		0
	CLR/12/Sleep/Ent		Fav / Marker / PC
	Disc/Album		CH+ / Page+
	Disc/Album CH-		CH- / Page-
	Vol+		Vol+
	Vol-		Vol-

**Originalfernbedienung Ersatzfernbedienung**

	Pause/<		Pause / Step / Freeze
	Play		Play / Slow
	Stop		Stop / Hold
	<<		<< / Tune-
	>>		>> / Tune+
	<<		<< / Preset-
	>>		>>  / Preset+
	Stereo		Audio / Lang I/II
	Surround		Eject / Surround
	< Listening Mode		Left
	Listening Mode >		Right
	Level-/Random		Blue / Prime Video / Random
	Level+/Repeat		Green / APP / Repeat
	Display		Display / Media



