
 

 

 

 

 

 

 

 

 

 

 
 








 
 










Originalfernbedienung Ersatzfernbedienung

| | | | |
|---|---------------|---|-----------------------------|
| | Guide |  | Guide / EPG / -/-- |
|  | Power |  | Power |
|  | Eject |  | Eject / Surround |
|  | Tv/Radio |  | TV/Radio / |
|  | Red/Goto |  | Red / Netflix / Search |
|  | Green/Angle |  | Green / APP / Repeat |
|  | Yellow/Repeat |  | Yellow / YouTube / Repeat |
|  | Blue/A-B |  | Blue / Prime Video / Random |
|  | FAV |  | Fav / Marker / PC |
|  | Text |  | Text / Goto |
|  | Freeze/Hold |  | Shift + Pause / Step / |
|  | D.Menu |  | D.Menu / Top |
|  | Subtitle |  | Subtitle / EQ |
|  | Zoom/Size |  | Zoom / Size |
|  | Aspect |  | Shift + Picture / Format |
|  | Subpage |  | Info / Angle |
|  | Media |  | Shift + Display / Media |

Originalfernbedienung Ersatzfernbedienung

| | | | |
|---|------------|---|-----------------------|
|  | Play |  | Play / Slow |
|  | Pause |  | Pause / Step / Freeze |
|  | << |  | << / Tune- |
|  | >> |  | >> / Tune+ |
|  | D.Setup |  | Setup / OPT / |
|  | Rec |  | Rec / Rec Mode |
|  | Stop |  | Stop / Hold |
|  | I<< |  | I<< / Preset- |
|  | >>I/Index |  | >>I / Preset+ |
|  | Menu |  | Menu / Home |
|  | Lang/Audio |  | Audio / Lang I/II |
|  | Up |  | Up |
|  | Left |  | Left |
|  | OK |  | OK |
|  | Right |  | Right |
|  | Sleep |  | Sleep / Timer |
|  | Down |  | Down |





Originalfernbedienung Ersatzfernbedienung

| | | | |
|--|------------|--|----------------------------|
| | Title/Exit | | Exit / Cancel / Clear |
| | Vol+ | | Vol+ |
| | Mute | | Mute / Dimmer |
| | CH+ | | CH+ / Page+ |
| | Vol- | | Vol- |
| | Display | | Display / Media |
| | CH- | | CH- / Page- |
| | 1 | | 1 |
| | 2 | | 2 |
| | 3 | | 3 |
| | 4 | | 4 |
| | 5 | | 5 |
| | 6 | | 6 |
| | 7 | | 7 |
| | 8 | | 8 |
| | 9 | | 9 |
| | -/-- | | Shift + Guide / EPG / -/-- |

Originalfernbedienung Ersatzfernbedienung

| | | | |
|--|--------|--|------------------|
| | 0 | | 0 |
| | Back | | Back / Return |
| | Source | | AV / Input / RDS |
| | P.Mode | | Picture / Format |
| | S.Mode | | Sound / Title |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |

