










 















**Originalfernbedienung Ersatzfernbedienung**

	Power		Power
	Muting		Mute / Dimmer
	Play		Play / Slow
	Pause		Pause / Step / Freeze
	Stop		Stop / Hold
	<</<I/Slow/Tunin		<< / Tune-
	Tuning+/Slow		>> / Tune+
	I<</Preset-		I<< / Preset-
	>>I/Preset+		>>I / Preset+
	Bass Level		Sound / Title
	Audio		Audio / Lang I/II
	Subtitle		Subtitle / EQ
	Open/Close		Eject / Surround
	Band		Picture / Format
	Sleep		Sleep / Timer
	Tv/Video		TV/Radio /
	DVD Menu		D.Menu / Top

**Originalfernbedienung Ersatzfernbedienung**

	DVD Setup		Setup / OPT /
	Name		Text / Goto
	AMP Menu		Menu / Home
	Up		Up
	Angle		Info / Angle
	Left		Left
	Enter		OK
	Right		Right
	Clear		Exit / Cancel / Clear
	Down		Down
	Return		Back / Return
	Vol+		Vol+
	Memory		Smart / List
	Vol-		Vol-
	Display		Display / Media
	1		1
	2		2





Originalfernbedienung Ersatzfernbedienung

	3		3
	4		4
	5		5
	6		6
	7		7
	8		8
	9		9
	>10		Guide / EPG / -/--
	0		0
	Repeat		Green / APP / Repeat
	Play Mode		Shift + Play /
	Stereo/Mono		Shift + Audio / Lang I/II
	Function		Shift + Setup / OPT / Tools
	DVD Top Menu		Shift + Menu /
	Sound Field+		Shift + Vol+
	Night Mode		Shift + Smart / List
	Sound Field-		Shift + Vol-

Originalfernbedienung Ersatzfernbedienung

	Enter1		Shift + 1
	DVD Display		Shift + 2







Originalfernbedienung Ersatzfernbedienung

	Power Tv		Power
	1		1
	2		2
	3		3
	4		4
	5		5
	6		6
	7		7
	8		8
	9		9
	0/10		0
	-/--		Guide / EPG / -/--
	Enter		OK
	Tv Vol+		Vol+
	Tv CH+		CH+ / Page+
	Tv Vol-		Vol-
	Tv CH-		CH- / Page-

Originalfernbedienung Ersatzfernbedienung