

 




 

 
 

 

 



 
 
 
 
 






 






 

 
 








 
 






 

 
 

 
 


 






Originalfernbedienung Ersatzfernbedienung

	Power		Power
	Ambilight		3D
	Sources		AV
	Settings		Options
	Top Picks		D. Menu
	Search		TV/R
	TV/Exit		Exit
	TV Guide		Guide
	[[ ]]		Format
	List		List
	Up		Up
	Down		Down
	Right		Right
	Left		Left
	OK		Ok
	←		Back
	+		Pre Ch

Originalfernbedienung Ersatzfernbedienung

	Home		Smart
	Red		Red
	Green		Green
	Yellow		Yellow
	Blue		Blue
	Vol+		Vol +
	Vol-		Vol -
	Mute		Mute
	Netflix		Media
	P+		Ch +
	P-		Ch -
	1		1
	2		2
	3		3
	4		4
	5		5
	6		6





Originalfernbedienung    Ersatzfernbedienung

	7		7
	8		8
	9		9
	0		0
	Subtitle		Subt
	Text		Text
	Stop		Stop
	Pause		Pause
	Rec		Rec
	<<		<<
	Play		Play
	>>		>>

Originalfernbedienung    Ersatzfernbedienung