



Originalfernbedienung Ersatzfernbedienung

	Power		Power
	Input		AV / Input / RDS
	1		1
	2		2
	3		3
	4		4
	5		5
	6		6
	7		7
	8		8
	9		9
	Info		Info / Angle
	0		0
	EPG		Guide / EPG / -/-
	Vol+		Vol+
	Mute		Mute / Dimmer
	Menu		Menu / Home

Originalfernbedienung Ersatzfernbedienung

	P+		CH+ / Page+
	Vol-		Vol-
	APP		Shift + Green / APP / REPEAT
	P-		CH- / Page-
	Up		Up
	Left		Left
	OK		OK
	Right		Right
	Back		Back / Return
	Down		Down
	X/Exit		Exit / Cancel / Clear
	Red		Red / Netflix / Search
	Green		Green / APP / Repeat
	Yellow		Yellow / YouTube / Repeat
	Blue		Blue / Prime Video / Random
	Audio		Audio / Lang I/II
	[...]/Sub		Subtitle / EQ





Originalfernbedienung **Ersatzfernbedienung**

TEXT	Text	GOTO TEXT	Text / Goto
RAD/TV	Rad/Tv	PROGRAM TV/ RADIO	TV/Radio /
LIST	List	LIST SMART	Smart / List
SAT	SAT	SHIFT + HDMI - SAT 0	Shift + 0

Originalfernbedienung **Ersatzfernbedienung**

