 
 

 

 

 




 


 
 


 
 

 


 

 





Originalfernbedienung Ersatzfernbedienung

	Standby		Power
	Tv/Radio		TV/R
	Mute		Mute
	1		1
	2		2
	3		3
	4		4
	5		5
	6		6
	7		7
	8		8
	9		9
	0		0
	Goto		Smart
	Favourite		Pre Ch
	Menu		Menu
	Info		Info

Originalfernbedienung Ersatzfernbedienung

	Recall		Back
	Exit		Exit
	Up		Up
	Down		Down
	Right		Right
	Left		Left
	OK		Ok
	CH+		Ch +
	CH-		Ch -
	Vol+		Vol +
	Vol-		Vol -
	EPG		Guide
	Subtitle		Subt
	Audio		Dual
	TTX		Text
	<<		<<
	>>		>>



