












 



 

 

























 








 




 









Originalfernbedienung Ersatzfernbedienung

	Power		Power
	Stop		Stop / Hold
	Pause		Pause / Step / Freeze
	Rec		Rec / Rec Mode
	<<		<< / Tune-
	Play		Play / Slow
	>>		>> / Tune+
	Source		AV / Input / RDS
	Exit		Exit / Cancel / Clear
	Guide		Guide / EPG / -/--
	Home		Menu / Home
	Smart Tv		Smart / List
	≡/List		Shift + Smart / List
	[i]/Info		Info / Angle
	Up		Up
	Left		Left
	OK		OK

Originalfernbedienung Ersatzfernbedienung

	Right		Right
	Down		Down
	III/Options		Setup / OPT /
	[<>]/Format		Picture / Format
	Back		Back / Return
	CH-		CH- / Page-
	CH+		CH+ / Page+
	Vol-		Vol-
	Mute		Mute / Dimmer
	Vol+		Vol+
	Red		Red / Netflix / Search
	Green		Green / APP / Repeat
	Yellow		Yellow / YouTube / Repeat
	Blue		Blue / Prime Video / Random
	1		1
	2		2
	3		3





Originalfernbedienung Ersatzfernbedienung

4 GHI	4	4 VIDEO	4
5 JKL	5	5 TAPE	5
MNO 6	6	6 TUNER	6
7 PQRS	7	7 AUX - HDD	7
8 TUV	8	8 USB	8
WXYZ 9	9	9 BLUETOOTH	9
SUBTITLE	Subtitle	SUBTITLE EQ	Subtitle / EQ
0 _	0	0 HDMI - BAT	0
TEXT	Text	GOTO TEXT	Text / Goto

Originalfernbedienung Ersatzfernbedienung

