

 

 









 




 
 









 













 

 











Originalfernbedienung Ersatzfernbedienung

	Power		Power
	EPG		Guide / EPG / -/--
	REP		TV/Radio /
	Mute		Mute / Dimmer
	Rec List		Shift + Rec / Rec Mode
	CH List		Smart / List
	Subtitle		Subtitle / EQ
	Eject		Eject / Surround
	Rec		Rec / Rec Mode
	Stop		Stop / Hold
	I<<		I<< / Preset-
	>>I		>>I / Preset+
	Pause		Pause / Step / Freeze
	Play		Play / Slow
	<<		<< / Tune-
	>>		>> / Tune+
	Source		AV / Input / RDS

Originalfernbedienung Ersatzfernbedienung

	Up		Up
	Display		Display / Media
	Left		Left
	OK		OK
	Right		Right
	Menu		Menu / Home
	Down		Down
	Exit		Exit / Cancel / Clear
	1		1
	2		2
	3		3
	4		4
	5		5
	6		6
	7		7
	8		8
	9		9





Originalfernbedienung		Ersatzfernbedienung		Originalfernbedienung		Ersatzfernbedienung	
0	0	HDMI - BAT 0	0	REVEAL TITLE	Title / Reveal	SHIFT + TITLE SOUND	Shift + Sound / Title
↶	Recall	RETURN BACK	Back / Return	PRO	PRO	SHIFT + MEDIA DISPLAY	Shift + Display / Media
FAV	Fav	PC FAV MARKER	Fav / Marker / PC	HOLD LAN	LAN / Hold	SHIFT + LIST SMART	Shift + Smart / List
▲ VOL	Vol +	+ VOL	Vol+	SIZE A-B	Size / A-B	SIZE ZOOM	Zoom / Size
PICTURE	Picture	FORMAT PICTURE	Picture / Format	SUBPAGE GOTO	Goto / Subpage	GOTO TEXT	Text / Goto
NICAM/A2	Nicam / A2	LANG I/II AUDIO	Audio / Lang I/II	INDEX SLOW	Index / Slow	ANGLE INFO	Info / Angle
▲ CH	CH +	+ CH PAGE	CH+ / Page+				
▼ VOL	Vol -	- VOL	Vol-				
SOUND	Sound	TITLE SOUND	Sound / Title				
SLEEP	Sleep	TIMER SLEEP	Sleep / Timer				
▼ CH	CH -	- CH PAGE	CH- / Page-				
Red	Red	NETFLIX SEARCH	Red / Netflix / Search				
Green	Green	APP REPEAT	Green / APP / Repeat				
Yellow	Yellow	YouTube REPEAT A-B	Yellow / YouTube / Repeat				
SCREEN	Blue / Screen	Prime Video RANDOM	Blue / Prime Video / Random				
TV/TXT SETUP	Setup / TV/Txt	OPT-TOOLS SETUP	Setup / OPT /				
CANCEL D-MENU	D-Menu /	TOP MENU D.MENU	D.Menu / Top				

