 

 

 






 

 
 

 
 








 

 





 



 

 

 
 
 

 
 




 

 
 

 
 

 

 
 








Originalfernbedienung Ersatzfernbedienung

	Power		Power
	Mute		Mute
	Red		Red
	Green		Green
	Blue		Blue
	Yellow		Yellow
	1		1
	2		2
	3		3
	4		4
	5		5
	6		6
	7		7
	8		8
	9		9
	0		0
	-/--		Shift + Guide





 
 




 
 

Originalfernbedienung Ersatzfernbedienung

	Recall		Back
	P.Mode		Format
	S.Mode		Shift + Dual
	Display		Info
	Sleep		Sleep
	Source		AV
	Audio/Nicam		Dual
	Tv Menu		Menu
	Exit		Exit
	Guide		Guide
	Up		Up
	Down		Down
	Right		Right
	Left		Left
	Enter		Ok
	Vol+		Vol +
	Vol-		Vol -

 

 


 




Originalfernbedienung Ersatzfernbedienung

	CH+		Ch +
	CH-		Ch -
	FAV		Pre Ch
	FAV+		Shift + Ch +
	Repeat/FAV-		Shift + Ch -
	Play		Play
	Pause		Pause
	Rec		Rec
	<<		<<
	>>/Hold		>>
	I<</Index		I<<
	>>/Size		>>I
	Text		Text
	Stop/Subpage		Stop
	Media		Media
	Zoom/Reveal		Eject
	Subtitle		Subt

Originalfernbedienung Ersatzfernbedienung

	Tv/Radio		TV/R
	Auto		Options
	EPG		D. Menu

