 

 
 
 
 
 
 

 
 
 
 


 

 

 
 
 
 
 



 



 

 

 

 
 
 
 
 





Originalfernbedienung    Ersatzfernbedienung

	Power		Power
	Input		AV
	TV/TXT		Text
	Cancel		Eject
	Reveal		Media
	Nicam/A2		Dual
	Hold		Options
	Size		Format
	Subpage		D. Menu
	Index		Smart
	Red		Red
	Green		Green
	Yellow		Yellow
	Blue		Blue
	CH+		Ch +
	CH-		Ch -
	Menu		Menu

Originalfernbedienung    Ersatzfernbedienung

	Exit		Exit
	Vol+		Vol +
	Vol-		Vol -
	Mute		Mute
	Channel List		TV/R
	EPG		Guide
	Info		Info
	Up		Up
	Down		Down
	Right		Right
	Left		Left
	OK		Ok
	1		1
	2		2
	3		3
	4		4
	5		5





Originalfernbedienung   Ersatzfernbedienung

	6		6
	7		7
	8		8
	9		9
	0		0
	FAV		Pre Ch
	Picture		Shift + Format
	Sound		Shift + Dual
	Recall		Back
	Sleep		Sleep
	Subtitle		Subt
	Aspect		3D
	Rec		Rec
	<<		<<
	>>		>>
	List		List
	I<<		I<<

Originalfernbedienung   Ersatzfernbedienung

	>>		>>
	Repeat		Shift + Text
	Play		Play
	Pause		Pause
	Stop		Stop

