 









 

 













 

 

 







Originalfernbedienung Ersatzfernbedienung

	Power		Power
	Mute		Mute / Dimmer
	Red		Red / Netflix / Search
	Green		Green / APP / Repeat
	Yellow		Yellow / YouTube / Repeat
	Blue/Timer		Blue / Prime Video / Random
	Format		Picture / Format
	Res.		D.Menu / Top
	TTX		Text / Goto
	S-T		Sound / Title
	I<<		I<< / Preset-
	>>I		>>I / Preset+
	<<		<< / Tune-
	>>		>> / Tune+
	Play		Play / Slow
	Pause		Pause / Step / Freeze
	Stop		Stop / Hold

Originalfernbedienung Ersatzfernbedienung

	Rec		Rec / Rec Mode
	PVR List		Smart / List
	Menu		Menu / Home
	Up		Up
	Exit		Exit / Cancel / Clear
	Left		Left
	OK		OK
	Right		Right
	EPG		Guide / EPG / -/--
	Down		Down
	Info		Info / Angle
	CH+		CH+ / Page+
	CH-		CH- / Page-
	Tv/Rad		TV/Radio /
	Vol+		Vol+
	Vol-		Vol-
	Audio		Audio / Lang I/II





Originalfernbedienung		Ersatzfernbedienung		Originalfernbedienung		Ersatzfernbedienung	
	1		1				
	2		2				
	3		3				
	4		4				
	5		5				
	6		6				
	7		7				
	8		8				
	9		9				
	0		0				
	FAV		Fav / Marker / PC				
	Recall		Back / Return				

