
 














 









 

 




Originalfernbedienung Ersatzfernbedienung

	Power		Power
	Red/Rec/Instant		Red
	Green/<<		Green
	Yellow/Stop		Yellow
	Blue/play		Blue
	White/>>/□		>>
	>◆		D. Menu
	[]		Guide
	[o]/Timer		Sleep
	[?]		Eject
	[◆]		Format
	[≡]/Text		Text
	Menu		Menu
	OK		Ok
	Up		Up
	Down		Down
	Right		Right

Originalfernbedienung Ersatzfernbedienung

	Left		Left
	Vol+		Vol +
	Vol-		Vol -
	Mute		Mute
	P+		Ch +
	P-		Ch -
	1		1
	2		2
	3		3
	4		4
	5		5
	6		6
	7		7
	8		8
	9		9
	0		0
	P<P		Pre Ch





Originalfernbedienung Ersatzfernbedienung

	[i+]		Info
	I-II		Dual
	[> <]		Subt
	[1 2]		3D
	[]->		AV
	♪ Smart		Smart
	[] Smart		Media
	[<>]		Back
	[-o-]/Active Control		Options

Originalfernbedienung Ersatzfernbedienung





Originalfernbedienung	Ersatzfernbedienung	Originalfernbedienung	Ersatzfernbedienung
	Power		Power
	Red/Rec/Instant		Red
	Green/<<		Green
	Yellow/Stop		Yellow
	Blue/Play		Blue
	White/>>/□		>>
	[o]/Timer		Sleep
	[?]		Eject
	[♦]		Format
	[≡]/Text		Text
	Menu		Menu
	OK		Ok
	Up		Up
	Down		Down
	Right		Right
	Left		Left
	Vol+		Vol +
	Vol-		Vol -
	Mute		Mute
	P+		Ch +
	P-		Ch -
	1		1
	2		2
	3		3
	4		4
	5		5
	6		6
	7		7
	8		8
	9		9
	0		0
	P<P		Pre Ch
	[i+]		Info
	I-II		Dual





Originalfernbedienung Ersatzfernbedienung

	[> <]		Subt
	[1 2]		3D
	[]->		AV
	♪ Smart		Smart
	[] Smart		Media
	[<>]		Back
	[-o-]/Active Control		Options

Originalfernbedienung Ersatzfernbedienung





Originalfernbedienung	Ersatzfernbedienung	Originalfernbedienung	Ersatzfernbedienung
	Power		Power
	Red/Rec/Instant		Red
	Green/<<		Green
	Yellow/Stop		Yellow
	Blue/Play		Blue
	White/>>/□		>>
	[o]/Timer		Sleep
	[?]		Eject
	[♦]		Format
	[≡]/Text		Text
	Menu		Menu
	OK		Ok
	Up		Up
	Down		Down
	Right		Right
	Left		Left
	Vol+		Vol +
	Vol-		Vol -
	Mute		Mute
	P+		Ch +
	P-		Ch -
	1		1
	2		2
	3		3
	4		4
	5		5
	6		6
	7		7
	8		8
	9		9
	0		0
	P<P		Pre Ch
	[i+]		Info
	I-II		Dual





Originalfernbedienung Ersatzfernbedienung

	[> <]		Subt
	[1 2]		3D
	[]>		AV
	♪ Smart		Smart
	[] Smart		Media
	[<>]		Back
	[-o-]/Active Control		Options

Originalfernbedienung Ersatzfernbedienung

