



 


 





Originalfernbedienung Ersatzfernbedienung

	Tv/Radio		TV/Radio /
	Power		Power
	Play		Play / Slow
	Pause		Pause / Step / Freeze
	Stop		Stop / Hold
	<<		<< / Tune-
	>>		>> / Tune+
	Rec		Rec / Rec Mode
	Media		Display / Media
	Lang.		Audio / Lang I/II
	SUB		Subtitle / EQ
	Guide		Guide / EPG / -/--
	Up		Up
	Menu		Menu / Home
	Left		Left
	OK		OK
	Right		Right

Originalfernbedienung Ersatzfernbedienung

	FAV.		Fav / Marker / PC
	Down		Down
	X/Exit		Exit / Cancel / Clear
	Vol+		Vol+
	Mute		Mute / Dimmer
	P+		CH+ / Page+
	Vol-		Vol-
	i		Info / Angle
	P-		CH- / Page-
	Red		Red / Netflix / Search
	Green		Green / APP / Repeat
	Yellow/Timer		Yellow / YouTube / Repeat
	Blue		Blue / Prime Video / Random
	1		1
	2		2
	3		3
	4		4





Originalfernbedienung Ersatzfernbedienung

5 jkl	5	TAPE 5	5
6 mno	6	TUNER 6	6
7 pqrs	7	AUX - HDD 7	7
8 tuv	8	USB 8	8
9 wxyz	9	BLUETOOTH 9	9
TTX	TTX	GOTO TEXT	Text / Goto
0 .&#eacute;	0	HDMI - BAT 0	0
CH↵	CH Back	RETURN BACK	Back / Return

Originalfernbedienung Ersatzfernbedienung

