 

 
 
 

 

 
 
 
 
 
 

 

 

 
 
 

 


 
 
 
 

 
 
 




Originalfernbedienung Ersatzfernbedienung

	Power		Power
	Mute		Mute
	Text		Text
	MHP		Smart
	V-Format		Format
	Wide		Eject
	1		1
	2		2
	3		3
	4		4
	5		5
	6		6
	7		7
	8		8
	9		9
	0		0
	TivuEPG		Pre Ch

 
 


Originalfernbedienung Ersatzfernbedienung

	Menu		Menu
	Play		Play
	Pause		Pause
	Stop		Stop
	Rec		Rec
	<<		<<
	>>		>>
	<<		<<
	>>		>>
	Red		Red
	Green		Green
	Yellow		Yellow
	Blue		Blue
	Media		Media
	Guide		Guide
	Back		Back
	Exit		Exit





Originalfernbedienung Ersatzfernbedienung

 

 
 
 

 

 
 
 
 
 
 

 

 

 
 
 

 


 
 
 
 

 
 
 
	Up		Up
	Right		Right
	Down		Down
	Left		Left
	Ok		Ok
	Vol+		Vol +
	Vol-		Vol -
	List		List
	Info		Info
	Ch+		Ch +
	Ch-		Ch -
	Opt+		Options
	Sound		Dual
	Sub		Subt
	Tv/Radio		TV/R

Originalfernbedienung Ersatzfernbedienung






Originalfernbedienung Ersatzfernbedienung

	Power		Power
	Mute		Mute
	Text		Text
	MHP		Smart
	V-Format		Format
	Wide		Eject
	1		1
	2		2
	3		3
	4		4
	5		5
	6		6
	7		7
	8		8
	9		9
	0		0
	TivuEPG		Pre Ch










 
Originalfernbedienung Ersatzfernbedienung

	Menu		Menu
	Play		Play
	Pause		Pause
	Stop		Stop
	Rec		Rec
	<<		<<
	>>		>>
	l<<		l<<
	>>l		>>l
	Red		Red
	Green		Green
	Yellow		Yellow
	Blue		Blue
	Media		Media
	Guide		Guide
	Back		Back
	Exit		Exit





**Originalfernbedienung    Ersatzfernbedienung**

	Up		Up
	Right		Right
	Down		Down
	Left		Left
	OK		Ok
	Vol +		Vol +
	Vol -		Vol -
	List		List
	i		Info
	CH +		Ch +
	CH -		Ch -
	Opt+		Options
	Sound		Dual
	Sub		Subt
	Tv/Radio		TV/R

**Originalfernbedienung    Ersatzfernbedienung**